

# SLC RF Controller AC 1x1,2A 100-240V On/Off

S21009












Important: Read All Instructions Prior to Installation

#### **Function introduction**

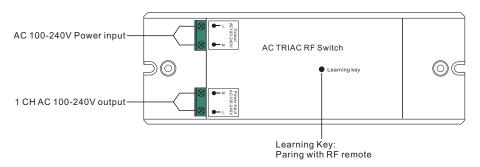

# **Product Data**

Input Voltage	Output Voltage	Output Current	Output Power	Size(LxWxH)
100-240VAC	1x(100-240)VAC	1x1.2A	1x(120-288)W	170x59x29mm

- Safe and reliable full isolation design
- Great compatibility with a variety of remote controls
- To switch on/off single color LED lamps, traditional incandescent and halogen lights
- Radio Frequency: 868/915/434mhz
- Waterproof grade: IP20

# Safety & Warnings

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

# Operation


# 1. Pair RF Receiver with RF remote:


- 1.1. Connect and wire up the RF receiver correctly, power on.
- 1.2. Turn on the remote, click the "Learning Key" button on receiver, immediately click zone number then touch color wheel on remote, the connected led light on receiver flickers twice, means well paired.

Note: one receiver can be paired with max 8 remote controls.


#### 2. Delete the pairing:

- 2.1. Wire up the RF receiver correctly, power on
- 2.2. Hold the "Learning Key" button on receiver over 3 seconds until the connected led light on receiver flickers twice, means well deleted.

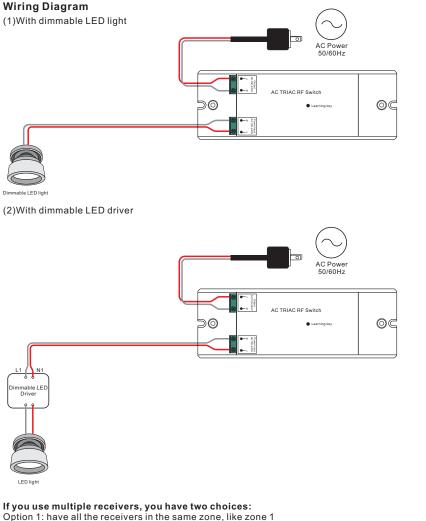

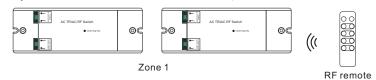

Option 2: have each receiver in a different zone, like zone 1, 2, 3 or 4

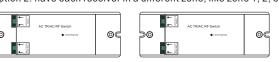





RF remote

Zone 1 Zone 2 Zone 3